

Introduction.....	2
Setup	3
Button Functions	4
Programming Your Remote	6
Direct Code Entry.....	6
Auto Code Search	8
Controlling Combo Devices.....	9
Using Your Remote	10
Master Volume Feature	10
Code Identification	11
Reset to Factory Settings	11
Troubleshooting.....	12

Your universal remote requires two (2) AAA batteries (not included). Alkaline batteries are recommended.

1. On the back of the remote, pull down on the textured surface and slide battery cover downward to remove.
2. Match the (+) and (-) marks on the batteries to the (+) and (-) marks inside the battery compartment then insert two (2) AAA batteries. Be sure to use fresh batteries.
3. Position battery cover slightly below opening and push upward to lock into place.

NOTE: If your remote stops operating properly, replace the batteries with new ones.

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

Your remote automatically turns off if the buttons are depressed more than 8 seconds. This will save your batteries should your remote get stuck in a place where the buttons remain depressed (e.g., between the sofa cushions).

You have up to 10 minutes to change the batteries in your remote without losing the codes you have programmed.

A detailed diagram of a remote control with 20 numbered callouts pointing to specific buttons and features:

- 1: Power button
- 2: Input button
- 3: TV button
- 4: CBL button
- 5: DVD button
- 6: AUX button
- 7: Navigation buttons (Left, Right, Stop, Play/Pause)
- 8: Home button
- 9: Menu button
- 10: Directional pad (Up, Down, Left, Right)
- 11: OK button
- 12: Previous button
- 13: Stop button
- 14: Volume Up button
- 15: Volume Down button
- 16: Channel Up button
- 17: Channel Down button
- 18: Numeric keypad (1-9)
- 19: Mute button
- 20: Enter button

1. Power - turns devices On/Off
2. Input - Selects video inputs
3. TV, cbl, dvd, aux - Selects the device to control
4. Record, play, stop, rewind, fast forward, pause
5. DVD/Blu-ray™ open/close - open/close a player, or List features on cable/satellite receivers
6. Setup - Used to program the remote
7. APPS - Access top apps -Netflix®, YouTube® Prime Hulu®
8. Home/Guide - Easily access features on today's streaming devices, or Guide on cable/satellite receivers
9. Menu - Displays the on-screen menu
10. Up/Down/Left/Right menu navigation
11. Ok - Selects menu items for the controlled device
12. Exit - Exit on-screen menus
13. Info - Displays on-screen show/content information
14. Volume Up/Down
15. Mute - Mutes sound
16. Channel Up/Down
17. Previous Channel - Returns to the previously selected channel
18. Numbers - Enter numbers for direct channel selection
19. Dot (•) - Used to select digital channels, e.g., 4.1
20. Enter - Some devices require enter to be pressed after channel selection

Your remote is designed to control multiple audio/video devices. To use, you will need to program the remote for your devices. There are two different methods you can use to program the remote, Direct Code Entry or Auto Code Search.

- The Direct Code Entry method is the recommended method as it is the simplest and quickest method in most cases.
- The Auto Code Search method searches through all the codes in the remote to find a code for your device.

Note: this remote comes preprogrammed for Samsung TVs. Press TV for Samsung TVs.

1. Locate the Code List included with your remote. Find the section for the type of device you wish to control, (for example TV, cbl, dvd, aux.). Locate the brand of your device and circle all the remote codes for the brand.
2. Press and hold down the SETUP button on the remote until the red light on the remote control turns on. Release the SETUP button. The red light will remain on.

Note: The red light will either be a small light at the top of the remote or the power on/off button.
3. Press and release the device button on the remote for the type of device you wish to control, (for example TV, cbl, dvd, aux.). The red light will blink once and remain on.

Note: Any of the device buttons on the remote can be programmed to control any of your devices. For example, you can use the CBL device button on the remote to control a Satellite Receiver, Digital Converter Box, Streaming Media Player or any device category in the Code List.

4. Use the number buttons on the remote to enter the first 4-digit remote code you circled in the Code List in Step 1. The red light will turn off after entering the fourth digit.
5. Point the remote at the device. Test the buttons on the remote to see if the device responds as you would expect. If the buttons do not operate the device, return to Step 2 above and use the next code that you circled for that device.
6. Repeat steps 1 – 5 for each device you wish to control.

- Some codes may operate only a few functions of your device. There may be another code in the Code List that controls more functions. Test other codes in the Code List for more functionality.
- If you do not find a remote code that works your device or there are no codes in the Code List for your device, use the Auto Code Search method in the next section to program your remote.
- For combination devices such as a TV/D VD combo or TV/ VCR combo, you may have to enter a code for each device. (See Controlling Combo Devices .)
- Write down the remote codes used to program the remote for future reference.

Some combo devices (e.g. TV/VCR, TV/DVD, DVD/VCR, etc.) will require you to set up two different device buttons to control both parts of the combo device. For example, if you have a TV/DVD combo, you may need to set up one code under the TV button to control the TV and a separate code under the b-ray button to control the DVD.

2. Press and release the device button (TV, aux, etc.) programmed to control the Master Volume Feature.
3. Press and release the MUTE button.
4. Press and release the VOL - button. The red light will blink twice and turn off.

1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.
2. Press and release the desired device button (TV, cable, dvd, aux) you would like the code for.
3. Press and release the **ENTER** button.
4. Press and release the **#1** button. Count the number of times the remote light flashes. This is the number corresponding to the first digit of the code. Repeat the process by pressing the #2, #3 and #4 buttons for the remaining digits.
5. Press and release the **ENTER** button to exit this mode.

1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.
2. Press and release the **MUTE** button.
3. Press and release the number **#0** button. The red indicator light will flash twice.

1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.
2. Press and release the desired device button (TV, cable, dvd, aux) you would like the code for.
3. Press and release the **ENTER** button.
4. Press and release the **#1** button. Count the number of times the remote light flashes. This is the number corresponding to the first digit of the code. Repeat the process by pressing the **#2**, **#3** and **#4** buttons for the remaining digits.
5. Press and release the **ENTER** button to exit this mode.

1. Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.
2. Press and release the **MUTE** button.
3. Press and release the number **#0** button. The red indicator light will flash twice.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Cellphones, Hearingphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio/Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$20.00	1 Year	1 Year
Pro Audio S&B Systems	\$75.00	1 Year	1 Year
Pro Audio P&A Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
VCRs/DVDs	\$20.00	1 Year	1 Year

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or resale use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFI disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFI for any damages claimed against QFI for such uses.

THE WARRANTIES AND REMEDY PROVIDED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT AND FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES; IF THESE LAWS APPLY, THEN ALL EXPRESS OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED OTHERWISE, ANY STATEMENT OR REPRESENTATION MADE BY ANY OTHER PERSONS OR FIRMS ARE VOID. EXCEPT AS PROVIDED IN THE WRITTEN WARRANTY, THIS SHALL NOT BE USED FOR ANY LOSS, INCONEVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE OFF-PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2020



www.qfxusa.com