



INSTRUCTION MANUAL



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remitir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



AVERTISSEMENT !



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.




This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2AOMX-BT579

Functions

 1. Charging LED indicator
2. ON/OFF switch
3. Mode button
4. Charging port
5. Auxiliary port
6. Previous Track/Decrease volume
7. Play/Pause button
8. Next Track/Increase volume
9. Mic volume button
10. TF Card Port
11. USB Port
12. Microphone input
13. LED Display
14. Carrying handle

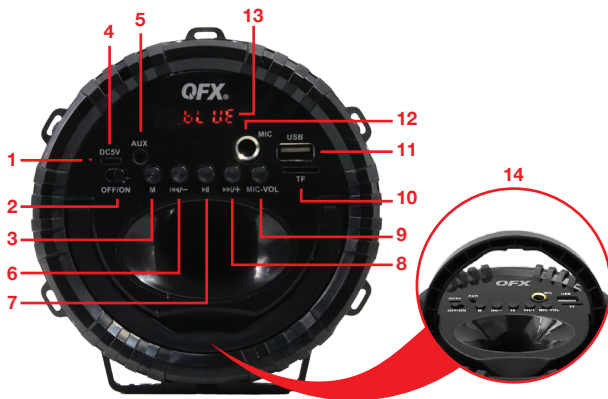

- Increase Volume: Press and hold on the ">>|+" to increase volume
 Decrease Volume: Press and hold on the ">>|-" to decrease volume
 Pause: Press >|| button to pause music
 Play: Press >|| button to play music
 Previous Track: Press on the ">>|-" to go back to the previous track
 Next Track: Press on the ">>|+" to go to the next track.
 Mic Echo: Plug in a wired microphone (not included) and you can control the echo sound as follows:
 • Double click the "MIC-VOL". The display showing "E00" means that there is no mic echo.
 • Keeping double clicking the "MIC-VOL" button to change the echo sound to either "E01", "E02" or "E03"
 • Each level adds more mic echo sound with "E03" having the most echo sound.

Bluetooth

- Turn ON the speaker, the LED display will show "BLUE", the speaker is now in pairing mode.
- Turn on the Bluetooth on your mobile phone or other Bluetooth enabled devices. It will search for various devices. The pairing name is "QFX BT-18" Search it and pair with this device.
- If required, enter the password "0000" to confirm to finalize pairing.
- Once paired successfully, you would hear an indication tone. Select your favorite song at the Bluetooth device and music would now stream through Bluetooth speaker.
- If you fail to pair it within the time frame or you want to pair it with a new device, please follows the steps outlined above.

Note: The speaker will automatically pair with previously paired devices. If you insert an SD card or USB flash drive while using the Bluetooth function, the speaker will automatically switch to the USB/SD function. To return to the Bluetooth function, press the MODE button.

FM Radio

1. Turn on the speaker.
2. Insert the auxiliary cord (included) into the auxiliary port. Leave the other end of the cord open, Auxiliary cord serves as FM antenna while in FM radio mode.
3. Press "MODE" button until FM mode is selected, the LED display will show "Lod" first and then FM frequency.
4. Press the >|| button once and the device would automatically search and store all the FM radio stations
5. Press ">>|-" or ">>|+" button to change the FM radio stations.


TF Card and USB

1. Turn on the speaker.
2. Insert TF card or USB flash drive, The LED display will show "Lad" first and then "TF" or "USB". Music will stream automatically.
3. Press ">>|+" or ">>|-" to move forward or backward on your playlist.
4. Press >|| button to Play or Pause a track.

Note: While using Bluetooth, if you insert a TF card or USB flash drive, the speaker will disconnect the Bluetooth connection and switch to the TF card or USB function. To select the Bluetooth mode again, press the mode button.

Funciones

 1. Indicador LED de carga
2. Interruptor de encendido/apagado
3. Botón de modo
4. Puerto de carga
5. Puerto auxiliar
6. Pista anterior/Bajar volumen
7. Botón de reproducción/pausa
8. Pista siguiente/Subir volumen
9. Botón de volumen del micrófono
10. Puerto para tarjeta TF
11. Puerto USB
12. Entrada de micrófono
13. Pantalla LED
14. Asa de transporte

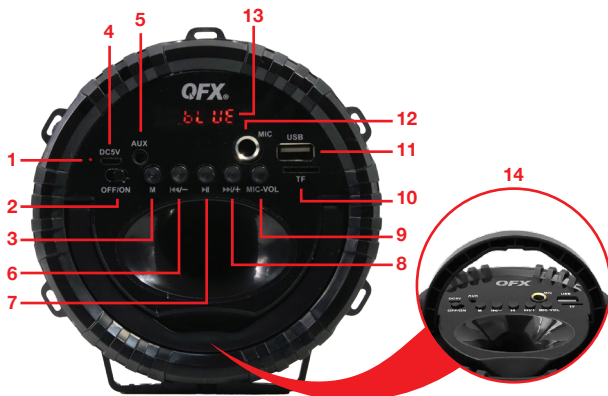

- Subir volumen: Mantén pulsado el botón ">>|+" para subir el volumen.
 Bajar volumen: Mantén pulsado el botón ">>|-" para bajar el volumen.
 Pausa: Pulsa el botón >|| para pausar la música.
 Reproducir: Pulsa el botón >|| para reproducir música.
 Pista anterior: Pulsa el botón ">>|-" para volver a la pista anterior.
 Siguiente pista: Pulsa el botón ">>|+" para ir a la siguiente pista.
 Mic Echo: Conecte un micrófono con cable (no incluido) y podrá controlar el sonido del eco de la siguiente manera:
 • Haga doble clic en "MIC-VOL". Si la pantalla muestra "E00", significa que no hay eco en el micrófono.
 • Mantenga pulsado el botón "MIC-VOL" para cambiar el eco a "E01", "E02" o "E03".
 • Cada nivel añade más eco, siendo "E03" el que tiene más eco.

Bluetooth

- Encienda el altavoz; la pantalla LED mostrará "AZUL"; el altavoz estará en modo de emparejamiento.
- Active el Bluetooth en su teléfono móvil u otros dispositivos compatibles con Bluetooth. Buscará varios dispositivos.
- El nombre de emparejamiento es "QFX BT-18". Búsquelo y emparejelo con este dispositivo.
- Si se le solicita, ingrese la contraseña "0000" para confirmar y finalizar el emparejamiento.
- Una vez emparejado correctamente, escuchará un tono de aviso. Seleccione su canción favorita en el dispositivo Bluetooth y la música se reproducirá a través del altavoz Bluetooth.
- Si no logra emparejarlo dentro del plazo establecido o si desea emparejarlo con un nuevo dispositivo, siga los pasos descritos anteriormente.

Nota: El altavoz se emparejará automáticamente con los dispositivos previamente emparejados. Si inserta una tarjeta SD o una unidad flash USB mientras usa la función Bluetooth, el altavoz cambiará automáticamente a la función USB/SD. Para volver a la función Bluetooth, pulse el botón MODE.

Radio FM

1. Encienda el altavoz.
2. Inserte el cable auxiliar (incluido) en el puerto auxiliar. Deje el otro extremo del cable abierto. El cable auxiliar funciona como antena FM en el modo de radio FM.
3. Pulse el botón "MODE" hasta seleccionar el modo FM. La pantalla LED mostrará primero "Lod" y luego la frecuencia FM.
4. Pulse el botón >|| una vez y el dispositivo buscará y almacenará automáticamente todas las emisoras de radio FM.
5. Pulse el botón ">>|-" o ">>|+" para cambiar de emisora.


Tarjeta TF y USB

1. Encienda el altavoz.
2. Inserta una tarjeta TF o una memoria USB. La pantalla LED mostrará primero "Lad" y luego "TF" o "USB". La música se reproducirá automáticamente.
3. Pulsa ">>|+" o ">>|-" para avanzar o retroceder en tu lista de reproducción.
4. Pulsa el botón >|| para reproducir o pausar una pista.

Nota: Al usar Bluetooth, si inserta una tarjeta TF o una memoria USB, el altavoz desconectará la conexión Bluetooth y cambiará a la función de tarjeta TF o USB. Para volver a seleccionar el modo Bluetooth, pulse el botón de modo.

Fonctions

 1. Voyant de charge
2. Interrupteur marche/arrêt
3. Bouton de mode
4. Port de charge
5. Port auxiliaire
6. Piste précédente/Diminuer le volume
7. Bouton lecture/pause
8. Piste suivante/Augmenter le volume
9. Bouton de volume du micro
10. Port pour carte TF
11. Port USB
12. Entrée microphone
13. Affichage LED
14. Poignée de transport

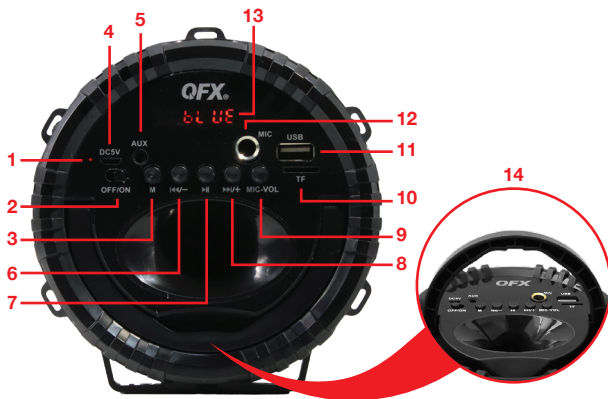

- Augmenter le volume : Appuyez longuement sur « >|+ » pour augmenter le volume.
 Diminuer le volume : Appuyez longuement sur « >|+ » pour baisser le volume.
 Pause : Appuyez sur le bouton >|| pour mettre la musique en pause.
 Lecture : Appuyez sur le bouton >|| pour écouter la musique.
 Piste précédente : Appuyez sur « >|+ » pour revenir à la piste précédente.
 Piste suivante : Appuyez sur « >|+ » pour passer à la piste suivante.
 Echo Mic : Branchez un microphone filaire (non inclus) et vous pouvez contrôler le son de l'écho comme suit :
 • Double-cliquez sur « MIC-VOL ». L'affichage « E00 » indique qu'il n'y a pas d'écho micro.
 • En double-cliquant longuement sur le bouton « MIC-VOL », vous pouvez choisir entre « E01 », « E02 » ou « E03 ».
 • Chaque niveau augmente l'écho micro, « E03 » étant le plus fort.

Bluetooth

- Allumez l'enceinte ; l'écran LED affiche « BLEU ». L'enceinte est alors en mode appairage.
- Activez le Bluetooth de votre téléphone portable ou de tout autre appareil compatible. Le système recherchera différents appareils. Le nom d'appairage est « QFX BT-18 ». Recherchez-le et appairez-le avec cet appareil.
- Si nécessaire, saisissez le mot de passe « 0000 » pour confirmer et finaliser l'appairage.
- Une fois l'appairage réussi, vous entendrez une tonalité. Sélectionnez votre chanson préférée sur l'appareil Bluetooth et la musique sera diffusée sur l'enceinte.
- Si vous ne parvenez pas à appairer l'enceinte dans le délai imparti ou si vous souhaitez l'appairer avec un nouvel appareil, veuillez suivre les étapes décrites ci-dessus.

Remarque : L'enceinte s'appairera automatiquement avec les appareils déjà appairés. Si vous insérez une carte SD ou une clé USB en Bluetooth, l'enceinte basculera automatiquement en mode USB/SD. Pour revenir au Bluetooth, appuyez sur le bouton MODE.

Radio FM

1. Allumez l'enceinte.
2. Insérez le câble auxiliaire (inclus) dans le port auxiliaire. Laissez l'autre extrémité du câble dénudée. Le câble auxiliaire sert d'antenne FM en mode radio FM.
3. Appuyez sur le bouton « MODE » jusqu'à ce que le mode FM soit sélectionné. L'écran LED affichera d'abord « Lod », puis la fréquence FM.
4. Appuyez une fois sur le bouton >|| pour que l'appareil recherche et mémorise automatiquement toutes les stations de radio FM.
5. Appuyez sur le bouton « >|+ » ou « >|+ » pour changer de station de radio FM.

Carte TF et USB

1. Allumez l'enceinte.
2. Insérez une carte TF ou une clé USB. L'écran LED affichera d'abord « Lad », puis « TF » ou « USB ». La musique sera diffusée automatiquement.
3. Appuyez sur « >|+ » ou « >|+ » pour avancer ou reculer dans votre playlist.
4. Appuyez sur le bouton >|| pour lire ou mettre en pause un morceau.

Remarque : Lors de l'utilisation du Bluetooth, si vous insérez une carte TF ou une clé USB, l'enceinte déconnectera la connexion Bluetooth et passera en mode carte TF ou clé USB. Pour réactiver le mode Bluetooth, appuyez sur le bouton Mode.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 457-9900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your BT-18 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

