

MPX-8282



WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remitir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

BATTERY

The MPX-8282 is a rechargeable battery speaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (8 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

BATERÍA

El MPX-8282 es un altavoz con batería recargable. Asegúrese de cargar completamente la batería antes del primer uso para maximizar su vida útil. Una vez conectado el adaptador de corriente a una fuente de alimentación, comenzará a cargarse automáticamente (8 horas para una carga completa). Incluso con poca carga, se encenderá al conectarlo a una fuente de alimentación. El indicador de batería se ilumina en rojo durante la carga. Cuando la batería esté completamente cargada, el indicador se apagará. Al finalizar la carga, desconecte el altavoz. Cuando no esté en uso, el altavoz debe estar siempre APAGADO para evitar que se agote la batería. Si no se utiliza durante periodos prolongados, la batería se irá descargando gradualmente. Se recomienda cargar la batería por completo al menos cada 60 días. Cuando la batería esté completamente descargada, el altavoz no podrá funcionar al 100% del volumen al conectarlo inmediatamente a una fuente de alimentación. Se recomienda cargarlo durante un tiempo antes de usarlo al 100% del volumen. Es posible que funcione y se cargue a un volumen menor. El nivel de volumen aumentará mientras la unidad se está cargando.


BATTERIE

L'enceinte MPX-8282 est munie d'une batterie rechargeable. Assurez-vous de charger complètement la batterie avant la première utilisation afin d'optimiser sa durée de vie. Une fois l'adaptateur secteur branché, la charge démarre automatiquement (8 heures pour une charge complète). Même si le niveau de la batterie est bas, l'enceinte s'allume dès qu'elle est branchée. Pendant la charge, le voyant de la batterie est rouge. Une fois la charge terminée, le voyant s'éteint. Après la recharge, débranchez l'appareil. Lorsque l'enceinte n'est pas utilisée, elle doit toujours être éteinte afin d'éviter la décharge de la batterie. En cas d'inutilisation prolongée, la batterie se décharge progressivement. Il est recommandé de la recharger complètement au moins tous les 60 jours. Lorsque la batterie est complètement déchargée, l'enceinte ne peut pas fonctionner à 100 % du volume dès qu'elle est branchée. Il est conseillé de la charger quelques instants avant d'utiliser le volume maximal. Le haut-parleur peut fonctionner et se recharger à un volume inférieur. Le niveau sonore augmentera pendant la charge de l'appareil.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2AOMX-MPX-8080

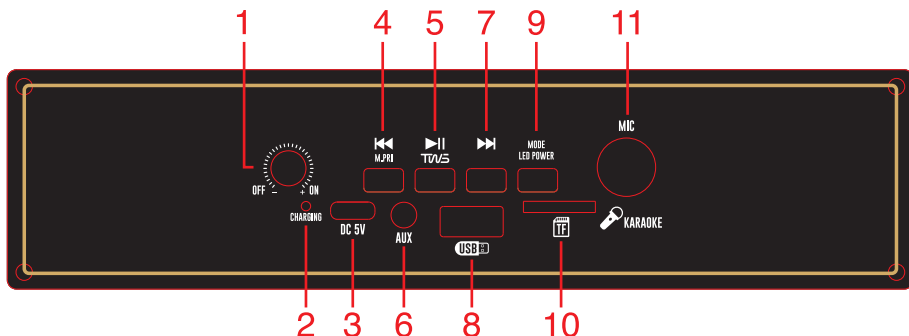

CONTROL PANEL FUNCTIONS

1. MASTER VOLUME / POWER
 - Power: ON/OFF Button
2. CHARGING INDICATOR
 - Indicates the charging status of the battery.
3. INPUT: USB-C 5VDC 1A min.
4. PREV / CH-
 - Press for previous track or FM station.
5. PLAY / SCAN:
 - Press to Play or Pause Track
 - FM: Press to autoscan available stations. Wait 1-2 minutes for process to complete.
 - TWS: Press and hold for TWS sync
6. AUX INPUT
 - Stereo mini jack
7. NEXT / CH+
 - Press for the next track or FM station.
8. USB PORT
 - Insert USB drive with MP3 formatted song files on it.
9. MODE / LED SW
 - Toggle between BT, AUX, USB, TF Card, FM Radio
 - Press and hold to power On/Off LED Lights.
10. TF CARD SLOT
 - Insert a TF card with MP3 formatted song files on it.
11. MIC INPUT
 - 6.35 mm TRS Input

CHARGING THE SPEAKER

1. A full charge takes 8–12 hours.
2. Please use the supplied charging cable to charge the speaker.
3. To protect the lifespan of the built-in battery, be sure to fully charge your unit on the same day the battery runs out.

WIRED MICROPHONE

 
Insert the microphone into the MIC INPUT jack.

BLUETOOTH® CONNECTION

You can connect your wireless devices such as a cellphone, computer etc., to listen to your audio tracks from this speaker. Toggle MODE to Bluetooth and select “QFX MPX-8282” to pair the devices to the speaker.

TWS (TRUE WIRELESS STEREO) To enjoy TWS, you must have two MPX-8282 speakers.

1. Turn on both speakers and switch both to bluetooth mode.
2. Place the speakers within 30 cm (12 in.) of each other.
3. Press and hold the TWS button on one speaker for 3 seconds. If the connection is successful you will hear sound that indicated the connection has been successful.
4. Turn on the phone Bluetooth and connect to the “QFX MPX-8282”. The two speakers will automatically connect to each other.

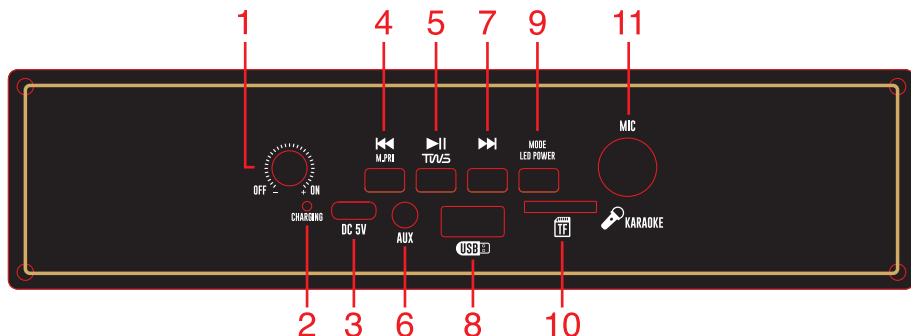

FUNCIONES DEL PANEL DE CONTROL

1. **VOLUMEN PRINCIPAL / ENCENDIDO**
 - Encendido: Botón de encendido/apagado
2. **INDICADOR DE CARGA**
 - Indica el estado de carga de la batería.
3. **ENTRADA: USB-C 5 V CC 1 A mín.**
4. **ANTERIOR / CANAL –**
 - Pulse para la pista o emisora FM anterior.
5. **REPRODUCIR / ESCANEAR:**
 - Pulse para reproducir o pausar la pista.
 - FM: Pulse para escanear automáticamente las emisoras disponibles. Espere de 1 a 2 minutos para que finalice el proceso.
 - TWS: Mantenga pulsado para sincronizar con TWS.
6. **ENTRADA AUXILIAR**
 - Miniconector estéreo
7. **SIGUIENTE / CANAL +**
 - Pulse para la siguiente pista o emisora FM.
8. **PUERTO USB**
 - Inserte una unidad USB con archivos de música en formato MP3.
9. **MODO / LED SW**
 - Cambia entre Bluetooth, AUX, USB, tarjeta TF y radio FM.
 - Mantenga pulsado para encender/apagar las luces LED.
10. **RANURA PARA TARJETA TF**
 - Inserte una tarjeta TF con archivos de música en formato MP3.
11. **ENTRADA DE MICRÓFONO**
 - Entrada TRS de 6,35 mm

CARGA DEL ALTAVOZ

1. Una carga completa tarda entre 8 y 12 horas.
2. Utilice el cable de carga suministrado para cargar el altavoz.
3. Para prolongar la vida útil de la batería integrada, cargue completamente la unidad el mismo día en que la batería se agote.

MICRÓFONO CON CABLE

 
Inserte el micrófono en la entrada MIC INPUT.

CONEXIÓN BLUETOOTH®

Puede conectar dispositivos inalámbricos como un teléfono celular, computadora, etc., para reproducir su audio a través de este altavoz. Cambie el MODO a Bluetooth y seleccione "QFX MPX-8282" para emparejar el dispositivo con el altavoz.

TWS (TRUE WIRELESS STEREO) Para disfrutar de la función TWS, necesita dos altavoces MPX-8282.

1. Encienda ambos altavoces y cambie ambos al modo Bluetooth.
2. Coloque los altavoces a una distancia máxima de 30 cm (12 pulg.) entre sí.
3. Mantenga presionado el botón TWS en uno de los altavoces durante 3 segundos. Si la conexión es exitosa, escuchará un sonido que confirmará que el emparejamiento se realizó correctamente.
4. Active el Bluetooth de su teléfono y conéctelo a "QFX MPX-8282". Los dos altavoces se conectarán automáticamente entre sí.

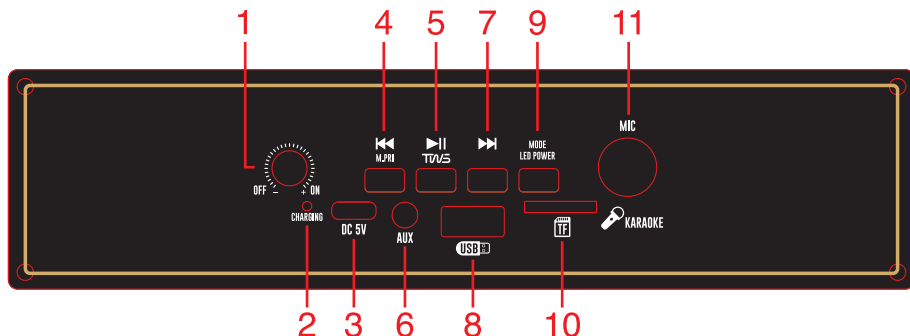

FONCTIONS DU PANNEAU DE COMMANDE

1. VOLUME PRINCIPAL / MARCHE/ARRÊT

- Bouton de marche/arrêt

2. INDICATEUR DE CHARGE

- Indique l'état de charge de la batterie.

3. ENTRÉE : USB-C 5 V CC 1 A min.

4. PRÉCÉDENT / CH-

- Appuyez pour passer à la piste ou à la station FM précédente.

5. LECTURE / RECHERCHE :

- Appuyez pour lire ou mettre en pause la piste.
- FM : Touchez pour lancer la recherche automatique des stations disponibles. Patientez de 1 à 2 minutes.
- TWS : Maintenez la pression pour la synchronisation TWS.

6. ENTRÉE AUXILIAIRE

- Prise stéréo mini-jack

7. SUIVANT / CH+

- Appuyez pour passer à la piste ou à la station FM suivante.

8. PORT USB

- Insérez une clé USB contenant des fichiers MP3.

9. MODE / ACTIVATION DES DEL

- Bascule entre Bluetooth, AUX, USB, carte TF et radio FM.
- Maintenez la pression pour allumer/éteindre les LED.

10. EMPLACEMENT POUR CARTE TF

- Insérez une carte TF contenant des fichiers musicaux au format MP3.

11. ENTRÉE MICRO

- Entrée jack TRS 6,35 mm

CHARGEMENT DE L'ENCEINTE

1. Une charge complète prend 8 à 12 heures.
2. Utilisez le câble de charge fourni pour recharger l'enceinte.
3. Pour prolonger la durée de vie de la batterie intégrée, rechargez complètement l'appareil le jour même où la batterie est déchargée.

MICROPHONE FILAIRE

Branchez le microphone dans l'entrée MIC INPUT.

CONNEXION BLUETOOTH®

Vous pouvez connecter des appareils sans fil tels qu'un téléphone portable, un ordinateur, etc., pour écouter votre musique à partir de cette enceinte. Sélectionnez le mode Bluetooth et choisissez « QFX MPX-8282 » pour jumeler votre appareil avec l'enceinte.

TWS (TRUE WIRELESS STEREO) Pour utiliser la fonction TWS, vous devez disposer de deux enceintes MPX-8282.

1. Allumez les deux enceintes et mettez-les toutes les deux en mode Bluetooth.
2. Placez les enceintes à moins de 30 cm (12 po) l'une de l'autre.
3. Maintenez le bouton TWS enfoncé sur l'une des enceintes pendant 3 secondes. Si la connexion est réussie, un signal sonore confirmera que le jumelage a été effectué avec succès.
4. Activez le Bluetooth de votre téléphone et connectez-vous à « QFX MPX-8282 ». Les deux enceintes se connecteront automatiquement l'une à l'autre.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable) either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, MPX-8282 number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

✉ support@qfxusa.com
☎ (800) 864-CLUB (2582) or (323) 457-9900
🌐 qfxusa.com
🕒 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product MPX-8282 conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or MPX-8282 number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your MPX-8282 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

