

REM-30R



WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

1. TV Mute / Programming Key – Roku Set-Top Boxes (Roku Express, Premiere, Roku Box 1, 2, 3, and 4). Not compatible with Roku Streaming Stick models.
2. TV Power – Turn the TV On/Off.
3. Back Button / Programming Key – TCL, LG, and ONN Roku TVs.
4. Home Button / Programming Key – Insignia Roku TVs.
5. OK Button – Confirm selections.
6. Navigation Buttons – Up, Down, Left, and Right.
7. TV Volume Down / Programming Key – Hisense Roku TVs.
8. TV Volume Up / Programming Key – Sharp Roku TVs and Element Roku TVs.
9. Instant Replay (Back) Button / Programming Key – Philips Roku TVs.
10. Sleep Timer / Programming Key – Haier Roku TVs.
11. Play/Pause Button / Programming Key – Sanyo Roku TVs.
12. Options (Settings) Button / Programming Key – Hitachi Roku TVs.
13. Rewind Button / Programming Key – JVC and Westinghouse Roku TVs.
14. Fast Forward Button / Programming Key – RCA Roku TVs.
15. Netflix Shortcut Key / Programming Key – Atvio Roku TVs.
16. YouTube Shortcut Key / Programming Key – Polaroid Roku TVs.
17. Disney+ Shortcut Key / Programming Key – Hisense Roku TV (Type 2).
18. Hulu Shortcut Key / Programming Key – Daewoo Roku TVs.
19. Prime Video Shortcut Key / Programming Key – Sharp Roku TV (Type 2).
20. Vudu Shortcut Key
21. Apple TV+ Shortcut Key
22. The Roku Channel Shortcut Key
23. Major Smart TV Brand Programming Keys – Samsung, LG, Sony, Panasonic, Vizio, and Toshiba TVs.



Programming Instructions

Programming for Major TV Brands

This remote supports the following TV brands: Samsung, LG, Sony, Panasonic, Vizio, Toshiba.

Setup

1. Press and hold the corresponding TV brand button for 5 seconds.
2. The LED indicator will flash and then turn off.
3. Programming is complete.
4. The remote is now ready to control your TV.

Note: Once programming is complete, you do not need to press the brand button again during normal use.

Programming Roku Streaming Devices Compatible with:

Roku Express, Roku Premiere, Roku Box 1, Roku Box 2, Roku Box 3, Roku Box 4

Not compatible with Roku Streaming Stick models.

Manual Search

1. Point the remote at the Roku device.
2. Press the Power and Mute buttons simultaneously.
3. The LED indicator will flash three times, sending a code to the device.
4. Check whether the Roku device responds.
5. If the device does not respond, repeat Steps 2–4 until the correct code is found.

Programming Roku TVs

Manual Code Search

1. Point the remote at the Roku TV.
2. Press the Power button together with the brand-specific programming key listed below.
3. The LED indicator will flash three times and send a code.

4. Check whether the TV responds.

5. If the TV does not respond, repeat the process until the correct code is found.

Roku TV Brand Keys

Roku TV Brand Button Combination

TCL / LG / ONN	Power + Back
Insignia	Power + Home
Hisense	Power + Volume Down
Sharp / Element	Power + Volume Up
Philips	Power + Instant Replay
Haier	Power + Sleep
Sanyo	Power + Play/Pause
Hitachi	Power + Options
JVC	Power + Rewind
Westinghouse	Power + Rewind
RCA	Power + Fast Forward
Atvio	Power + Netflix
Polaroid	Power + YouTube
Hisense (Code 2)	Power + Disney+
Daewoo	Power + Hulu
Sharp (Code 2)	Power + Prime Video

Important Notes

This remote is designed for both Roku TVs and Roku streaming devices with the exception of Roku streaming sticks..

The remote supports the most commonly used Roku features.

Certain Sharp and Hisense Roku TVs may require a secondary code. If the first programming key does not work, try the alternate key listed above.

For additional information, refer to the Function Guide.

1. Botón de silencio/programación del televisor: Decodificadores Roku Express, Premiere, Roku Box 1, 2, 3 y 4). No compatible con los modelos Roku Streaming Stick.
2. Botón de encendido/apagado del televisor: Enciende/apaga el televisor.
3. Botón de retroceso/programación: Televisores Roku TCL, LG y ONN.
4. Botón de inicio/programación: Televisores Roku Insignia.
5. Botón OK: Confirma las selecciones.
6. Botones de navegación: Arriba, Abajo, Izquierda y Derecha.
7. Botón de bajar volumen/programación del televisor: Televisores Roku Hisense.
8. Botón de subir volumen/programación del televisor: Televisores Roku Sharp y Element.
9. Botón de repetición instantánea (retroceso)/programación: Televisores Roku Philips.
10. Temporizador de apagado/programación: Televisores Roku Haier.
11. Botón de reproducir/pausar/programación: Televisores Roku Sanyo.
12. Botón de opciones (configuración)/programación: Televisores Roku Hitachi.
13. Botón de rebobinado / Tecla de programación: televisores Roku de JVC y Westinghouse.
14. Botón de avance rápido / Tecla de programación: televisores Roku de RCA.
15. Acceso directo a Netflix / Tecla de programación: televisores Roku de Atvio.
16. Acceso directo a YouTube / Tecla de programación: televisores Roku de Polaroid.
17. Acceso directo a Disney+ / Tecla de programación: televisores Roku Sharp y Element.
18. Acceso directo a Hulu / Tecla de programación: televisores Roku de Daewoo.
19. Acceso directo a Prime Video / Tecla de programación: televisores Roku Sharp (Tipo 2).
20. Acceso directo a Vudu.
21. Acceso directo a Apple TV+.
22. Acceso directo a The Roku Channel.
23. Teclas de programación de las principales marcas de Smart TV: Samsung, LG, Sony, Panasonic, Vizio y Toshiba.



Instrucciones de programación

Programación para las principales marcas de televisión

Este control remoto es compatible con las siguientes marcas de televisores: Samsung, LG, Sony, Panasonic, Vizio, Toshiba.

Configuración

1. Mantén pulsado el botón de la marca de tu televisor durante 5 segundos.
 2. El indicador LED parpadeará y luego se apagará.
 3. La programación ha finalizado.
 4. El control remoto ya está listo para controlar tu televisor.
- Nota: Una vez finalizada la programación, no es necesario volver a pulsar el botón de la marca durante el uso normal.

Dispositivos de transmisión Roku compatibles:

Roku Express, Roku Premiere, Roku Box 1, Roku Box 2, Roku Box 3 Roku Box 4

No es compatible con los modelos Roku Streaming Stick.

Búsqueda manual de códigos

1. Apunta el control remoto hacia el dispositivo Roku.
2. Presiona los botones de Encendido y Silencio simultáneamente.
3. El indicador LED parpadeará tres veces, enviando un código al dispositivo.
4. Verifica si el dispositivo Roku responde.
5. Si no responde, repite los pasos 2 a 4 hasta encontrar el código correcto.

Programación de televisores Roku

Búsqueda manual de códigos

1. Apunta el control remoto hacia el televisor Roku.
2. Presiona el botón de encendido junto con la tecla de programación específica de la marca que se indica a continuación.

3. El indicador LED parpadeará tres veces y mostrará un código.
4. Comprueba si el televisor responde.
5. Si no responde, repite el proceso hasta encontrar el código correcto.


Claves de marca de Roku TV

Combinación de botones de la marca Roku TV	
TCL / LG / ONN	Power + Back
Insignia	Power + Home
Hisense	Power + Volume Down
Sharp / Element	Power + Volume Up
Philips	Power + Instant Replay
Haier	Power + Sleep
Sanyo	Power + Play/Pause
Hitachi	Power + Options
JVC	Power + Rewind
Westinghouse	Power + Rewind
RCA	Power + Fast Forward
Atvio	Power + Netflix
Polaroid	Power + YouTube
Hisense (Code 2)	Power + Disney+
Daewoo	Power + Hulu
Sharp (Code 2)	Power + Prime Video

Notas importantes

Este control remoto está diseñado para televisores y dispositivos de transmisión Roku, con la excepción de los dispositivos Roku Stick. El control remoto es compatible con las funciones más utilizadas de Roku. Algunos televisores Roku de Sharp y Hisense pueden requerir un código secundario. Si la primera tecla de programación no funciona, pruebe con la tecla alternativa que se indica arriba. Para obtener más información, consulte la Guía de funciones.

1. Touche Muet/Programmation – Boîtiers Roku (Roku Express, Premiere, Roku Box 1, 2, 3 et 4). Non compatible avec les modèles Roku Streaming Stick.
2. Bouton Marche/Arrêt – Éteindre/Allumer le téléviseur.
3. Bouton Retour/Programmation – Téléviseurs Roku TCL, LG et ONN.
4. Bouton Accueil/Programmation – Téléviseurs Roku Insignia.
5. Bouton OK – Confirmer les sélections.
6. Boutons de navigation – Haut, Bas, Gauche, Droite.
7. Touche Volume -/Programmation – Téléviseurs Roku Hisense.
8. Touche Volume +/Programmation – Téléviseurs Roku Sharp et Element.
9. Touche Retour/Relecture instantanée – Téléviseurs Roku Philips.
10. Minuterie de mise en veille/Programmation – Téléviseurs Roku Haier.
11. Touche Lecture/Pause/Programmation – Téléviseurs Roku Sanyo.
12. Touche Options (Paramètres)/Programmation – Téléviseurs Roku Hitachi.
13. Touche de rembobinage / Touche de programmation – Téléviseurs Roku JVC et Westinghouse.
14. Touche d'avance rapide / Touche de programmation – Téléviseurs Roku RCA.
15. Touche de raccourci Netflix / Touche de programmation – Téléviseurs Roku Atvio.
16. Touche de raccourci YouTube / Touche de programmation – Téléviseurs Roku Polaroid.
17. Touche de raccourci Disney+ / Touche de programmation – Téléviseur Roku Hisense (Type 2).
18. Touche de raccourci Hulu / Touche de programmation – Téléviseurs Roku Daewoo.
19. Touche de raccourci Prime Video / Touche de programmation – Téléviseur Roku Sharp (Type 2).
20. Touche de raccourci Vudu.
21. Touche de raccourci Apple TV+.
22. Touche de raccourci The Roku Channel.
23. Touches de programmation des principales marques de téléviseurs connectés : Samsung, LG, Sony, Panasonic, Vizio et Toshiba.

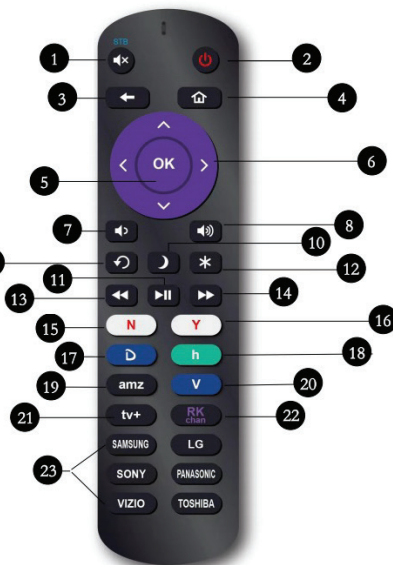

Instrucciones de programación

Programación para las principales marcas de televisión

Este control remoto es compatible con las siguientes marcas de televisores: Samsung, LG, Sony, Panasonic, Vizio, Toshiba.

Configuration

1. Maintenez appuyé le bouton de la marque de votre téléviseur pendant 5 secondes.
2. L'indicateur LED s'allume et s'éteint ensuite.
3. La programmation est finalisée.
4. La télécommande est là pour contrôler votre téléviseur.

Remarque : Une fois la programmation finalisée, il n'est pas nécessaire d'appuyer sur le bouton de la marque lors d'une utilisation normale.

Dispositifs de transmission compatibles Roku :

Roku Express, Roku Premiere, Roku Box 1, Roku Box 2, Roku Box 3 Boîte Roku 4

Non compatible avec les modèles Roku Streaming Stick.

Búsqueda manual de códigos

1. Apunta el control remoto hacia el dispositivo Roku.
2. Appuyez simultanément sur les boutons Encendido et Silencio.
3. L'indicateur LED apparaîtra trois fois en envoyant un code à l'appareil.
4. Vérifiez si l'appareil Roku répond.
5. Si vous ne répondez pas, répétez les étapes 2 à 4 jusqu'à trouver le code correct.

Programmation des téléviseurs Roku

Recherche manuelle de code

1. Pointez la télécommande vers votre téléviseur Roku.
2. Appuyez simultanément sur le bouton d'alimentation et sur la touche de programmation spécifique à la marque, indiquée ci-dessous.

3. Le voyant LED clignotera trois fois et affichera un code.

4. Vérifiez si votre téléviseur réagit.

5. Si ce n'est pas le cas, répétez la procédure jusqu'à trouver le bon code.

Principales caractéristiques de la marque Roku TV

Combinaison de boutons de la marque Roku TV

TCL / LG / ONN	Power + Back
Insignia	Power + Home
Hisense	Power + Volume Down
Sharp / Element	Power + Volume Up
Philips	Power + Instant Replay
Haier	Power + Sleep
Sanyo	Power + Play/Pause
Hitachi	Power + Options
JVC	Power + Rewind
Westinghouse	Power + Rewind
RCA	Power + Fast Forward
Atvio	Power + Netflix
Polaroid	Power + YouTube
Hisense (Code 2)	Power + Disney+
Daewoo	Power + Hulu
Sharp (Code 2)	Power + Prime Video

Remarques importantes

Cette télécommande est conçue pour les téléviseurs et appareils de diffusion Roku, à l'exception des clés Roku.

Elle est compatible avec la plupart des fonctionnalités Roku courantes. Certains téléviseurs Roku Sharp et Hisense peuvent nécessiter un code secondaire. Si la première touche de programmation ne fonctionne pas, essayez la touche alternative indiquée ci-dessus. Pour plus d'informations, consultez le guide des fonctionnalités.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 457-9900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your REM-30R Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

